

Normanville Hire

Dingo Instructions

PRE OPERATION

-
-

SLOPE OPERATION

-

TO REMOVE FROM TRAILER

- Place trailer on level ground and Leave trailer attached to tow vehicle
- Remove **turnbuckles** from side and release **tiedown strap** at front
- Remove back gate and place ramps in line with wheels
- Bucket must be kept low (25-50mm from ground during removal)
- Once engine is running keep dingo in low range and reverse slowly keeping wheels straight
-

TO START ENGINE

- Ensure Traction Lever is on SLOW
- Ensure Auxillary Lever is in NEUTRAL
- Move throttle to the halfway position
- Insert key and let glow plugs heat for about 10 seconds
- Start engine

LEVER CONTROLS and PLANT OPERATION

- The

SECURE BACK ONTO TRAILER

- Always Load on trailer face forward
- Keep in low range and keep bucket low (about 25-50mm)
- Secure hard against front Gate
- Ensure Park Brake is on and Key is removed
- Use Ratchet strap through arms to ensure it is fully locked in
- Ensure Turn buckles are attached and tight
-